


tv

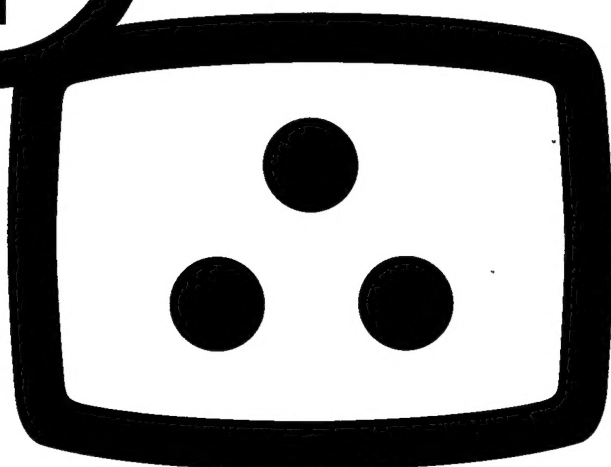


**PHILIPS**

Pick location <b>4A0-A05-A3</b>		Item <b>1 1 18</b>	Invicenumber <b>5618885-0003</b>	Wave <b>03</b>	Sort location <b>07-016</b>
Cust.code	Quantity <b>1</b>				
1958	Stock <b>503</b>	Invoice and ship to <b>380737 170866</b>		Order <b>070998</b>	Date <b>371</b>
Qty. SPQ <b>1</b>	Service code <b>4822 736 15435</b>		Description <b>DIRECTIONS FOR USE</b>		SPQ <b>1</b>
<i>to PT 1553</i>			Made in:		
			<i>Chasement</i>		
			<i>Miv Jannes</i>		



# Installation

## Action :

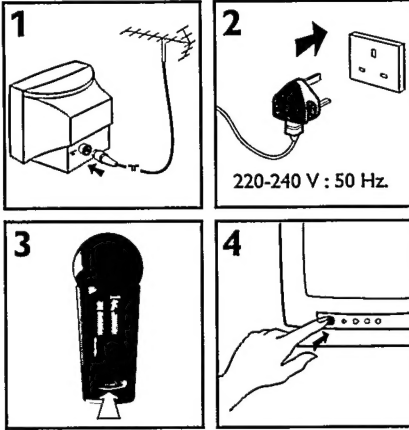


## Result. Comments.

- 1 Small-screen TV sets are supplied with an indoor antenna, which under certain reception conditions may not be acceptable. You may be able to improve reception by rotating the antenna or if reception remains poor the use of an external antenna.
- 2 Plug your television into the mains supply (220-240 V / 50 Hz).
- 3 Insert the two LR03 type batteries (supplied) making sure that they are the right way round.
- 4 To switch on the TV set, press the on/off button. If the TV set remains in standby mode : press the  $\ominus$  P  $\oplus$  keys on the remote control.


# Channel search : Manual Store

## Action :



## Result. Comments.

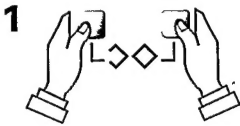



The **INSTALLATION** menu is displayed on the screen.

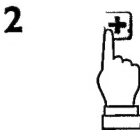



The **MANUAL STORE** menu appears.

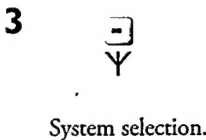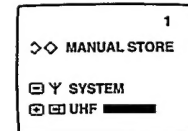

*Option only available on certain versions.*  
Press key until required system appears : **FRANCE** (SECAM L L') or **EUROPE** (PAL BG, SECAM BG).

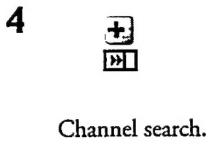
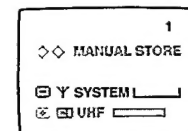


**SEARCHING** appears, the search bar shows progress.  
When a programme is found, the number flashes.

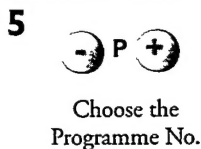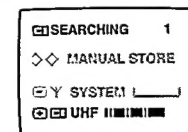


Enter the programme number you want.

 *Note: Programme number 0 cannot be used.*

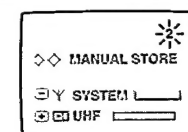

**STORED** appears, the programme is stored.

Repeat steps 4 to 6 to store each programme.

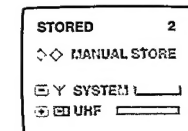

To leave the **INSTALLATION** menu press **MENU** twice.

## Another method : AutoStore

- 1 Press the two keys at the same time to select the **INSTALLATION** menu.
- 2 Using the key, select the **AUTOSTORE** menu.
- 3 Press the key to select the system (**FRANCE** or **EUROPE**). This option is only available on certain versions.
- 4 Press the key to run AutoStore for all available programmes  
**SEARCHING** appears. Searching lasts several minutes.
- 5 When the search is finished, the **INSTALLATION** menu reappears. The programmes found are arranged by number 69, 68, 67, ...etc. You may now renumber these programmes as you wish.

### To renumber a programme:

- 1 Select the **MANUAL STORE** menu using the key.
- 2 Select the program to be renumbered using the **P** keys (or /).
- 3 Press the two keys, the number flashes.
- 4 Enter the programme number you want ( **P** or / keys).
- 5 Press the two keys to store the programme under the new number.

**STORED** appears, the programme is stored.

Repeat the operation for each programme to be numbered.

To leave the **INSTALLATION** menu press the key twice.

## Using the remote control

 
### Press :



**Standby**

### Result :

The TV set switches off, the light is red.  
To turn on the TV set, press the **P** keys.




**Programme selection**

The number is displayed on the screen, the previous () or next () programme is selected.



**Numbered keys**

 The number is displayed, the programme is selected. For a 2-digit number, the second digit must be added before the line disappears.



**Volume**

Volume is changed.



 
**Mute**

Switches sound on or off.



**Menu**

By pressing the menu button several times the following items can be adjusted : (volume), (brightness), (contrast), (definition), (colour) and (timer).



**Menu adjustment**

This modifies the menu item selected. Using the **timer** () function, you can adjust the **time** after which the TV set will automatically switch into standby mode (up to 24 hours). If you put the TV set into standby mode, it will turn itself on automatically when the time has elapsed.



**Storing of adjustments**

Firstly, display a menu : , , , , or , then press the two keys. **STORED** appears. All menu adjustments are stored, except for the timer.



**Personal preferences**

Recall your stored adjustments.



**Screen info**

To turn on or off the display of the programme number and remaining time on the timer.



**Sound mode**

Function not available.

## Teletext. *Only available on some versions.*

### Press :



Teletext request

### Function :

To turn teletext on or off. A main index appears with the list of items to which you have access.  
*If the channel does not have teletext, the screen remains black.*



Selecting a page

 
Use the number keys to select the page you want (always three figures). The number appears in the top left-hand corner, the counter searches then the page is displayed.  
*If the counter continues searching or if P?.. appears, the page is not available.*



To select the previous or next page.



Stopping the sequence of sub-pages

Certain pages contain sub-pages which follow on automatically. Press the  key to stop / resume the sequence.



Enlarging a page


Press this button several times to view the upper part, the lower part and then return to normal size.



Hidden information

To reveal hidden information (in games, etc.). Pressing the button a second time will again hide the information.

## TV set keys

 

The TV set has 3 or 4 keys (on some models these are located behind a flap).


Versions with 3 keys: A **Menu** key and - and + keys to select programs and adjust menus.


Versions with 4 keys: two **VOLUME** - and + keys and two **PROGRAM** - and + keys.

## Connecting other appliances






Use the euroconnector socket at the back of the TV set.

To reproduce the picture from connected appliances, press the  key (**AV** appears on the screen). To connect a video recorder, refer to its manual.

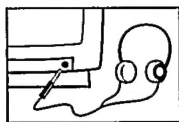

   **Headphones:** *(only on some versions)*

The headphone socket is on the front of the TV set (depending on version, it may be concealed by a cover). When the headphones are connected, the sound from the TV set is muted. Use the    key on the remote control to adjust the volume.

## Tips

**Installation:** To avoid any dangerous situations and operating faults, do not place anything on the TV set and leave a space of at least 5 cm around the appliance.

**Poor picture quality:** The proximity of mountains or high buildings may be responsible for ghost pictures, echoes or shadows. If this is the case, change the orientation of the antenna.  
Have you remembered to connect the aerial socket ?

**Standby:** To save energy and preserve optimum picture quality (by demagnetising the tube), you are advised to switch off your TV set using the on/off button at the front of the TV set.

**Recycling directive:** To minimise harm to the environment, the batteries supplied with the appliance do not contain mercury or nickel cadmium. When disposing of batteries, if possible use recycling means available to you (contact your dealer).  
Your TV set makes use of reusable and recyclable materials. To minimise harm to the environment, specialist companies will recover used TV sets for dismantling and collection of reusable materials.

*In the event of a breakdown, under no circumstances attempt to repair the TV set yourself; contact your dealer.*

